



www.icarusworld.net


ICARUS World Support
support@icarusworld.net

S/N

DOM _____ / _____ (MM/YY)

(Date of Manufacture)

Double Command Standard (6 & 2)

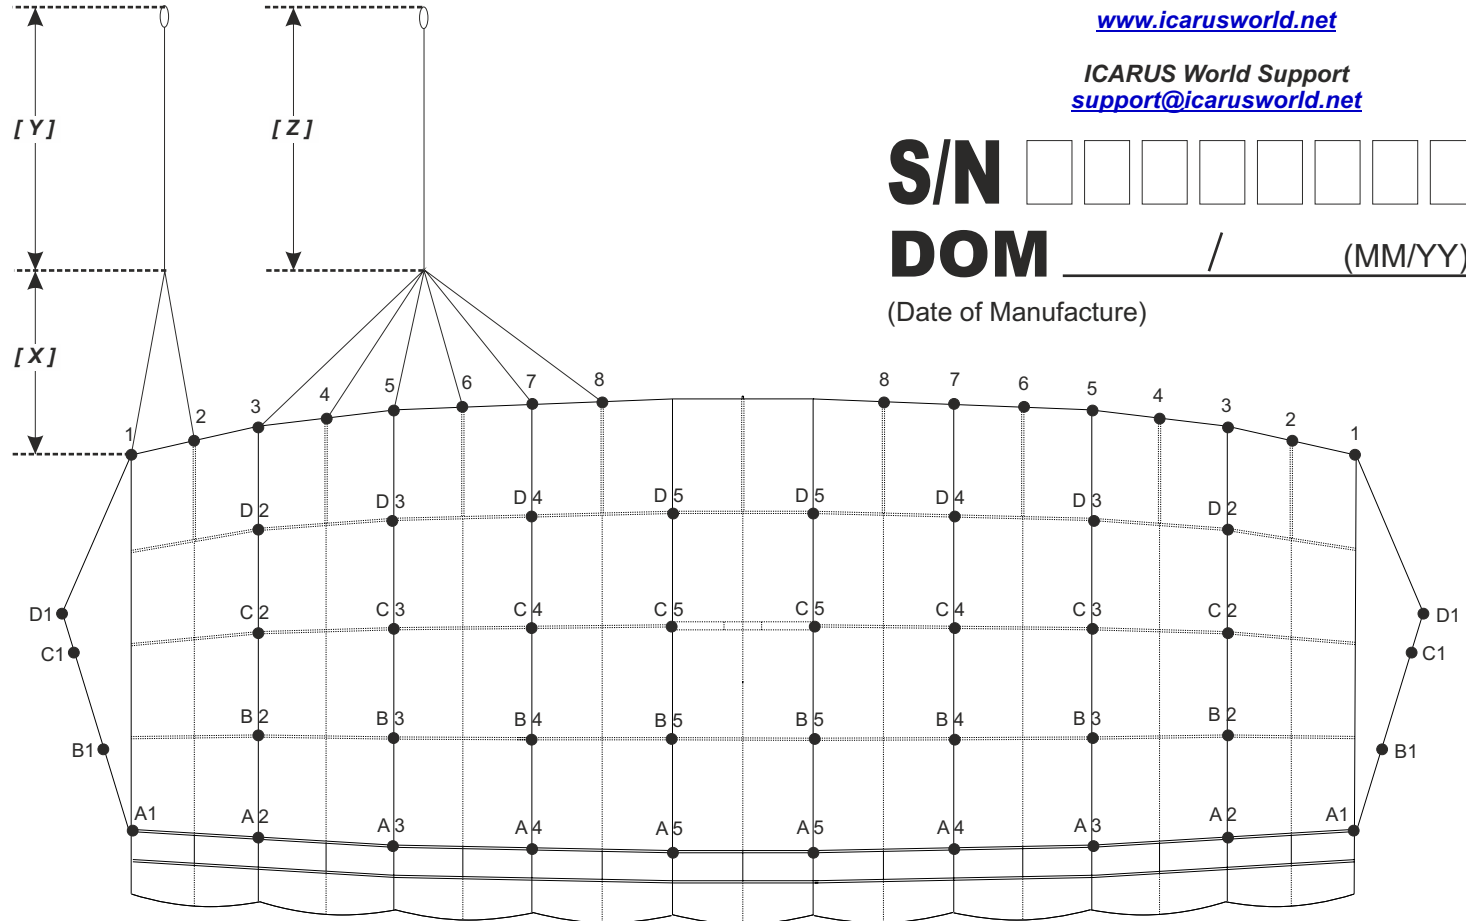

WHEN YOU RECEIVE A NEW LINE SET:

- **B or D Lines (cascades):** you can place them in either B or D-Line position, since all of them have the same length, and they are not specifically marked with their spanwise position.

Final Measurements (cm)

OUTSIDE	A1	454,4
	A2	455,3
	A3	455,5
	A4	455,6
CENTER	A5	455,7

OUTSIDE	B1	445,8
	B2	462,2
	B3	462,3
	B4	462,3
CENTER	B5	462,4

OUTSIDE	C1	442,3
	C2	479,3
	C3	480,5
	C4	481,0
CENTER	C5	481,4

OUTSIDE	D1	445,4
	D2	503,7
	D3	506,9
	D4	508,0
CENTER	D5	509,1

		Standard (6&2)
[X] UPPER STEERING LINES	1	134,3
	2	134,3
	3	159,7
	4	146,3
	5	137,4
	6	137,4
	7	146,3
	8	159,7
[Y] LOWER STEERING LINE		397,3
[Z] LOWER STEERING LINE		414,1

CANOPY	TX2
SIZE	310



www.icarusworld.net


ICARUS World Support
support@icarusworld.net

S/N

DOM _____ / _____ (MM/YY)

(Date of Manufacture)

Single Brake Line

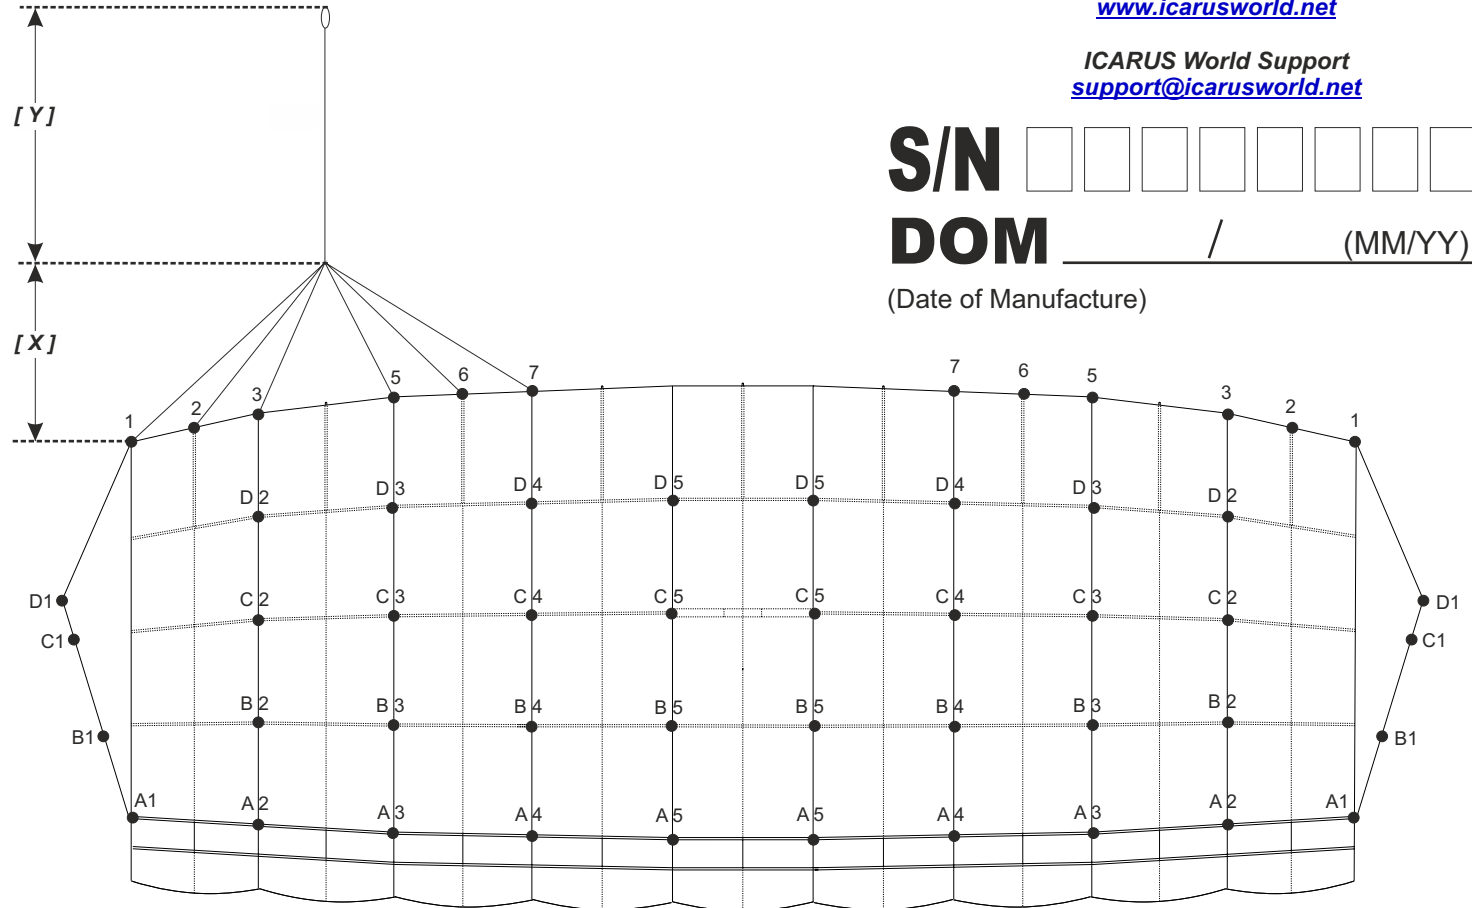

WHEN YOU RECEIVE A NEW LINE SET:

- **B or D Lines (cascades):** you can place them in either B or D-Line position, since all of them have the same length, and they are not specifically marked with their spanwise position.

Final Measurements (cm)

OUTSIDE	A1	454,4
	A2	455,3
	A3	455,5
	A4	455,6
CENTER	A5	455,7

OUTSIDE	B1	445,8
	B2	462,2
	B3	462,3
	B4	462,3
CENTER	B5	462,4

OUTSIDE	C1	442,3
	C2	479,3
	C3	480,5
	C4	481,0
CENTER	C5	481,4

OUTSIDE	D1	445,4
	D2	503,7
	D3	506,9
	D4	508,0
CENTER	D5	509,1

		Single Brake Line
[X] UPPER STEERING LINES	1	159,7
	2	146,3
	3	137,4
	4	x
	5	137,4
	6	146,3
	7	159,7
	8	x
[Y] LOWER STEERING LINE		414,1

CANOPY	TX2
SIZE	310