



[www.icarusworld.net](http://www.icarusworld.net)


ICARUS World Support  
[support@icarusworld.net](mailto:support@icarusworld.net)

S/N

DOM \_\_\_\_\_ / \_\_\_\_\_ (MM/YY)

(Date of Manufacture)

### Double Command Standard (6 & 2)

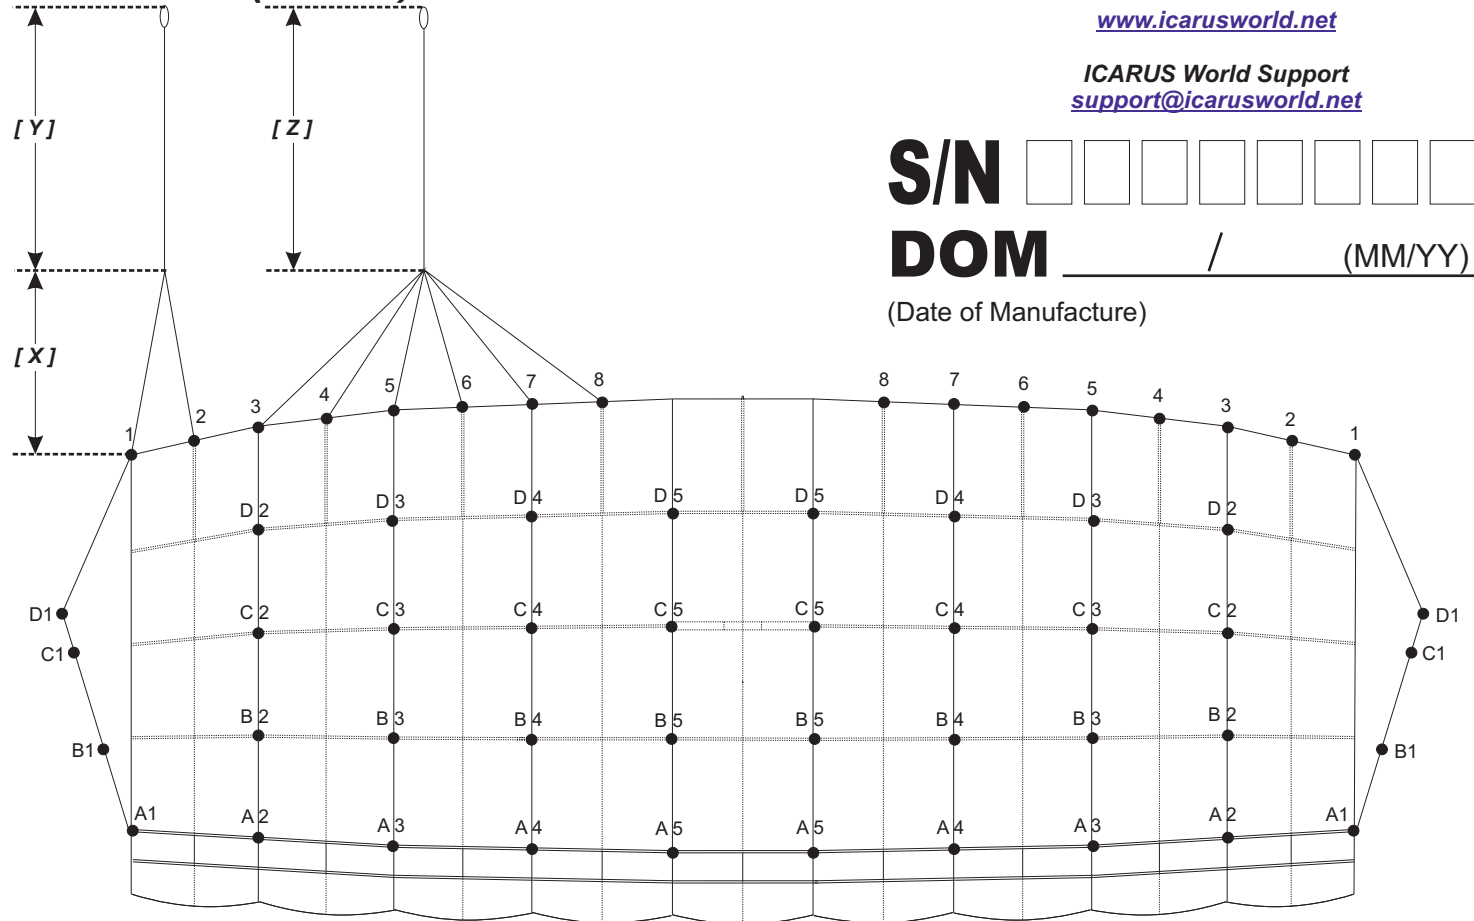

#### Final Measurements (cm)

OUTSIDE	A1	496,0
	A2	496,8
	A3	496,8
	A4	496,8
CENTER	A5	496,9

OUTSIDE	B1	488,7
	B2	506,6
	B3	506,7
	B4	506,7
CENTER	B5	506,7

OUTSIDE	C1	487,4
	C2	527,5
	C3	529,0
	C4	529,5
CENTER	C5	530,0

OUTSIDE	D1	492,1
	D2	556,2
	D3	559,8
	D4	561,0
CENTER	D5	562,3

		Standard (6&2)
[ X ] UPPER STEERING LINES	1	149,2
	2	149,2
	3	173,4
	4	158,9
	5	149,2
	6	149,2
	7	158,9
	8	173,4
[ Y ] LOWER STEERING LINE		438,5
[ Z ] LOWER STEERING LINE		456,7

CANOPY	TX2 "STEEP"
SIZE	365

#### WHEN YOU RECEIVE A NEW LINE SET:

- **B or D Lines (cascades):** you can place them in either B or D-Line position, since all of them have the same length, and they are not specifically marked with their spanwise position.



[www.icarusworld.net](http://www.icarusworld.net)

ICARUS World Support  
[support@icarusworld.net](mailto:support@icarusworld.net)

**S/N**

**DOM** \_\_\_\_\_ / \_\_\_\_\_ (MM/YY)

(Date of Manufacture)

**Final Measurements (cm)**

OUTSIDE	A1	496,0
	A2	496,8
	A3	496,8
	A4	496,8
CENTER	A5	496,9

OUTSIDE	B1	488,7
	B2	506,6
	B3	506,7
	B4	506,7
CENTER	B5	506,7


OUTSIDE	C1	487,4
	C2	527,5
	C3	529,0
	C4	529,5
CENTER	C5	530,0

OUTSIDE	D1	492,1
	D2	556,2
	D3	559,8
	D4	561,0
CENTER	D5	562,3

		Single Brake Line
[ X ] UPPER STEERING LINES	1	173,4
	2	158,9
	3	149,2
	4	x
	5	149,2
	6	158,9
	7	173,4
	8	x
[ Y ] LOWER STEERING LINE		456,7

CANOPY	TX2 "STEEP"
SIZE	365

**Single Brake Line**

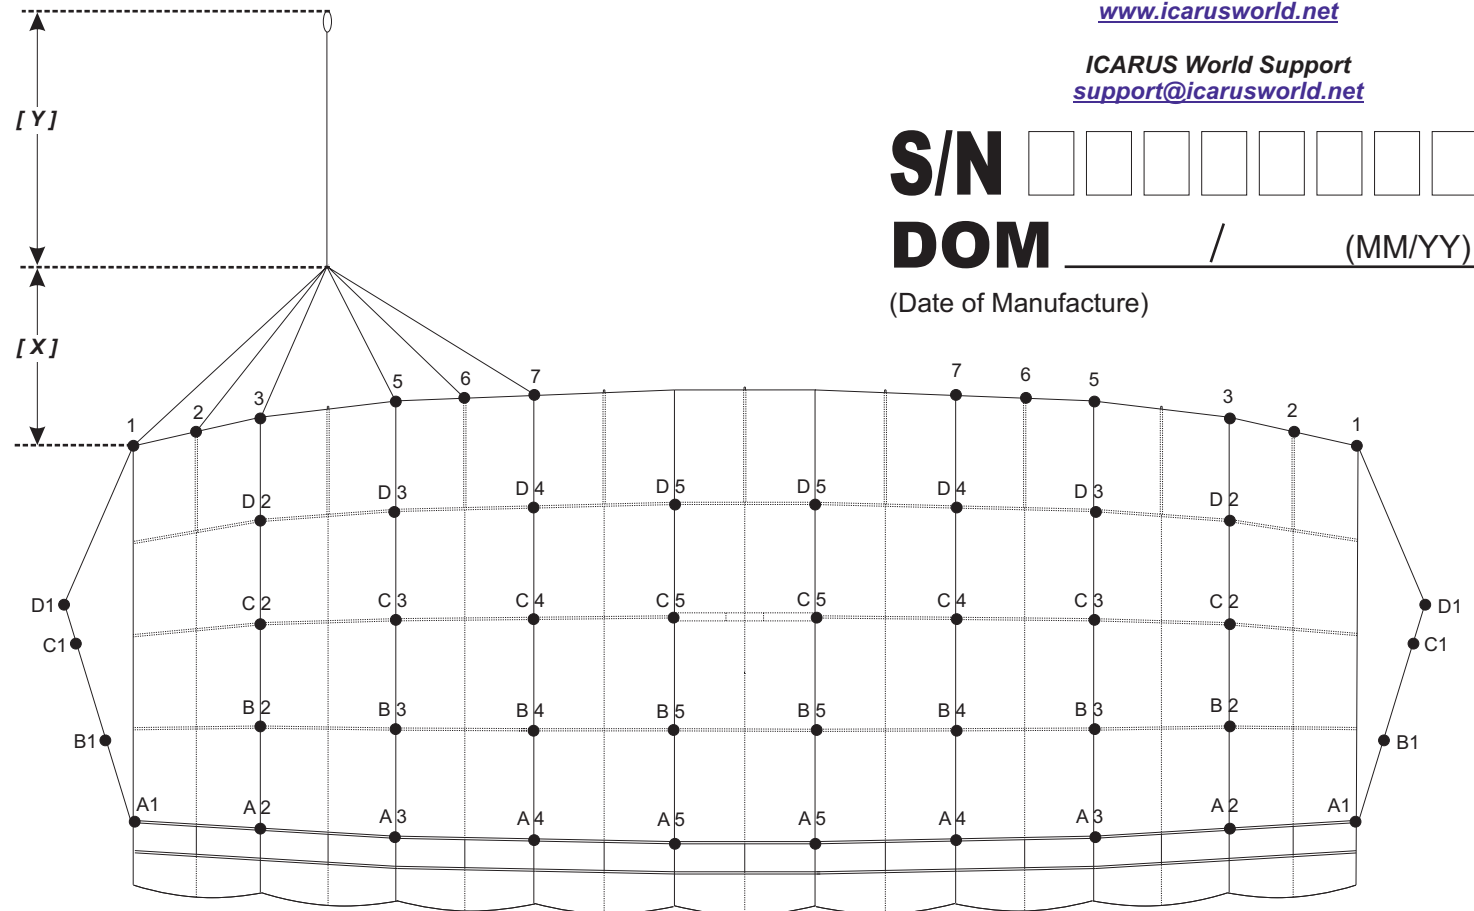

**WHEN YOU RECEIVE A NEW LINE SET:**

- **B or D Lines (cascades):** you can place them in either B or D-Line position, since all of them have the same length, and they are not specifically marked with their spanwise position.